



How to connect 24V NPN sensor to TTL input of CNC control board with optocouple

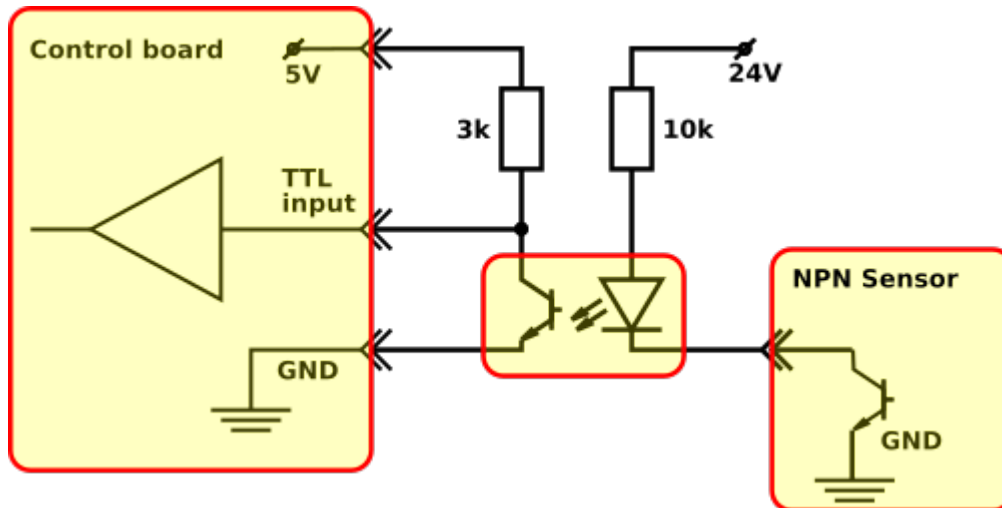

How to connect Contact sensor to ET6/ET7/ET10 optoisolated input

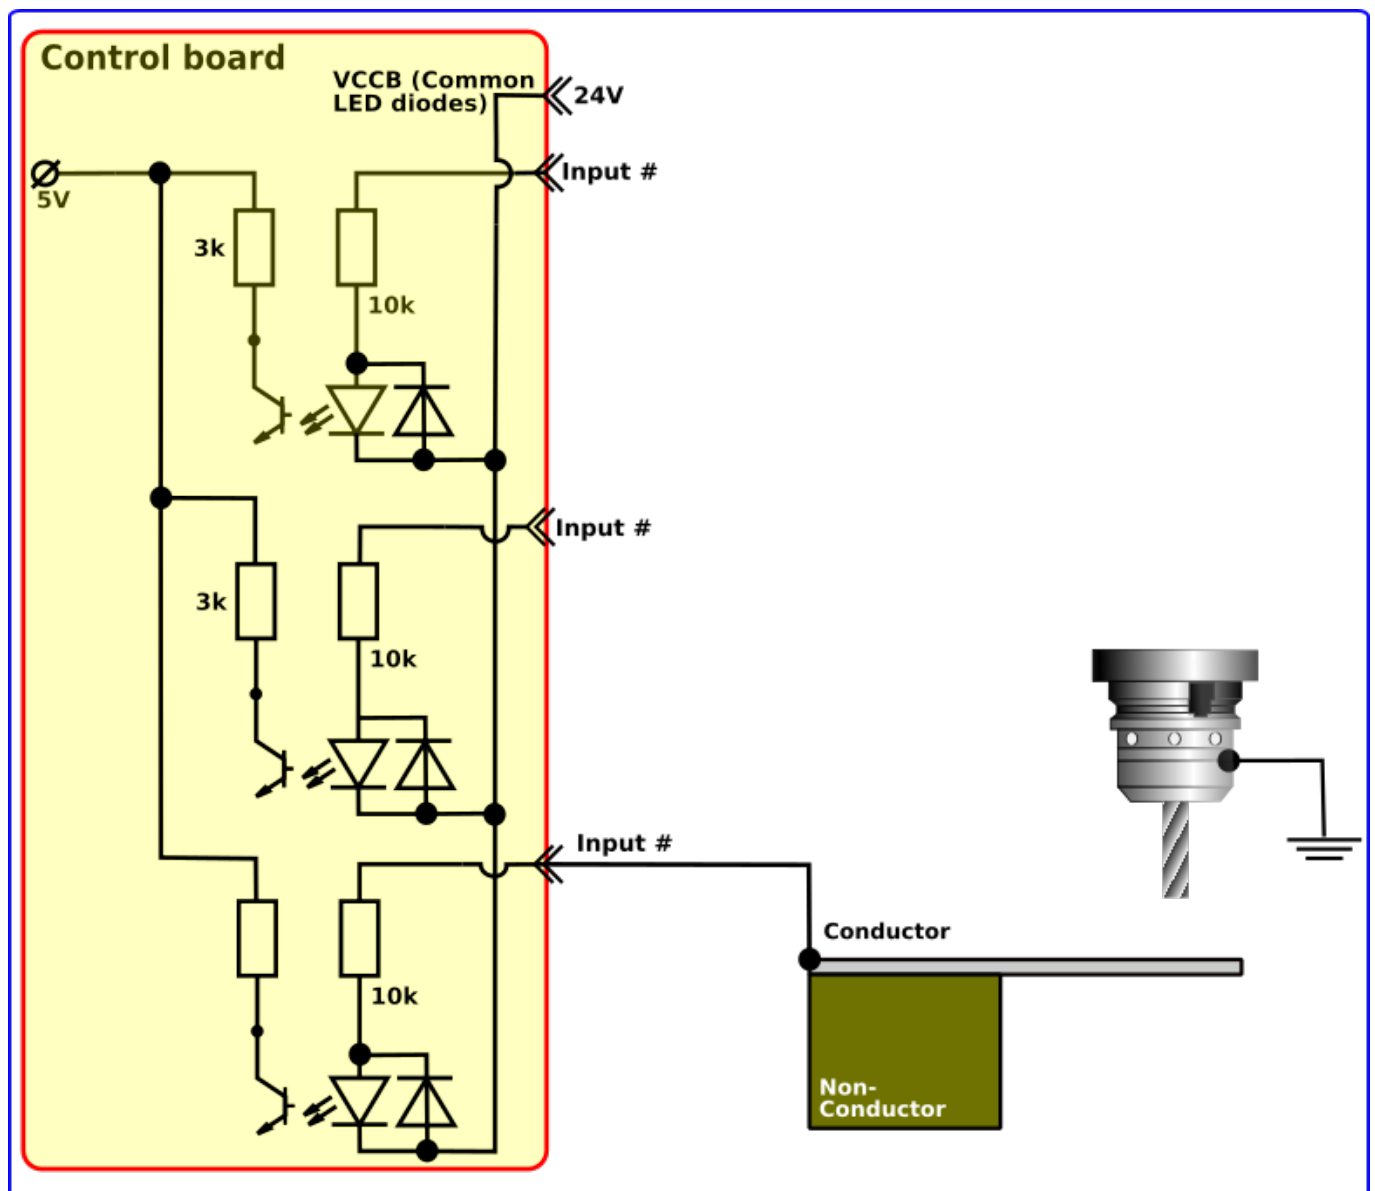

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

<http://docs.pv-automation.com/other/npn-sensor-to-ttl-input>

Last update: **2017/07/04 19:21**

