



# Triggers/Timers

Main window:

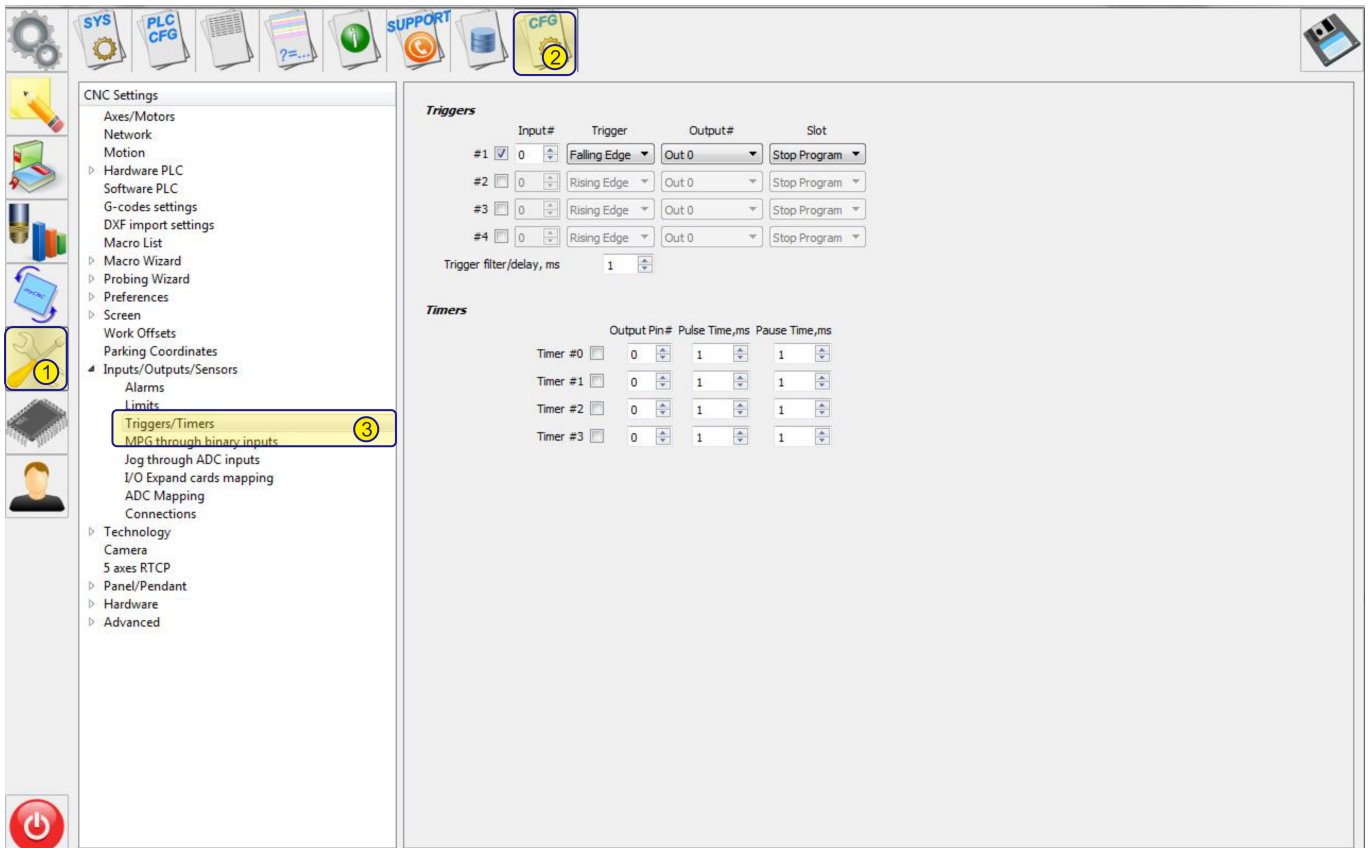


Basic functions:

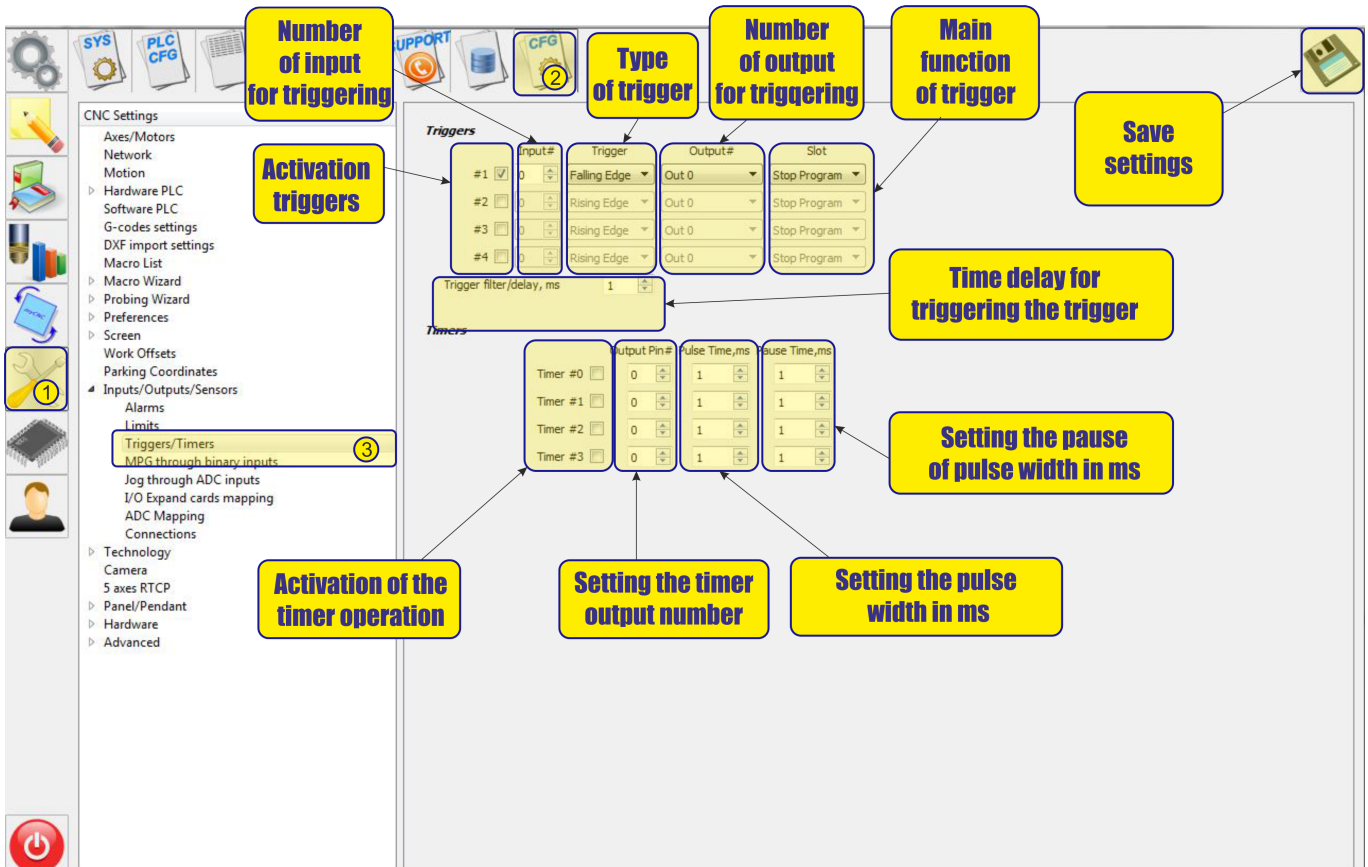


# Triggers


- To activate the trigger , it is necessary to check the box next to number of trigger:

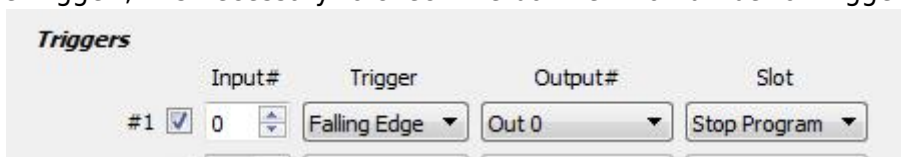


- Then select the type of triggering the trigger.

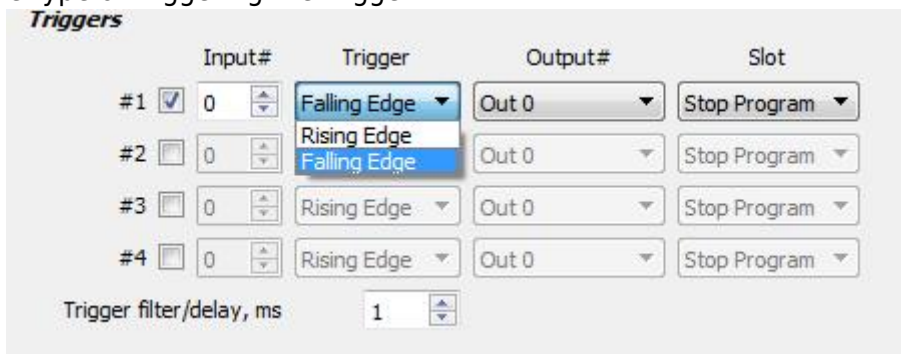


- **Faling Edge** - Trigger triggering on the falling edge of the impulse, i.e. when passing from the upper state ("1") to the lower state ("0").

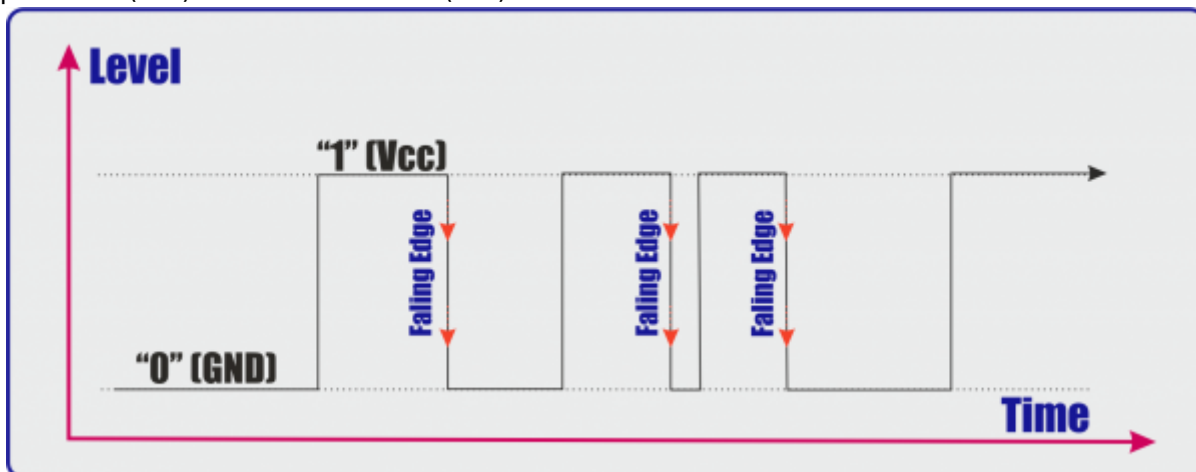

- **Rising Edge** - Trigger triggering on the rising edge of the impulse, i.e. when passing from the lower state ("0") to the upper state ("1").

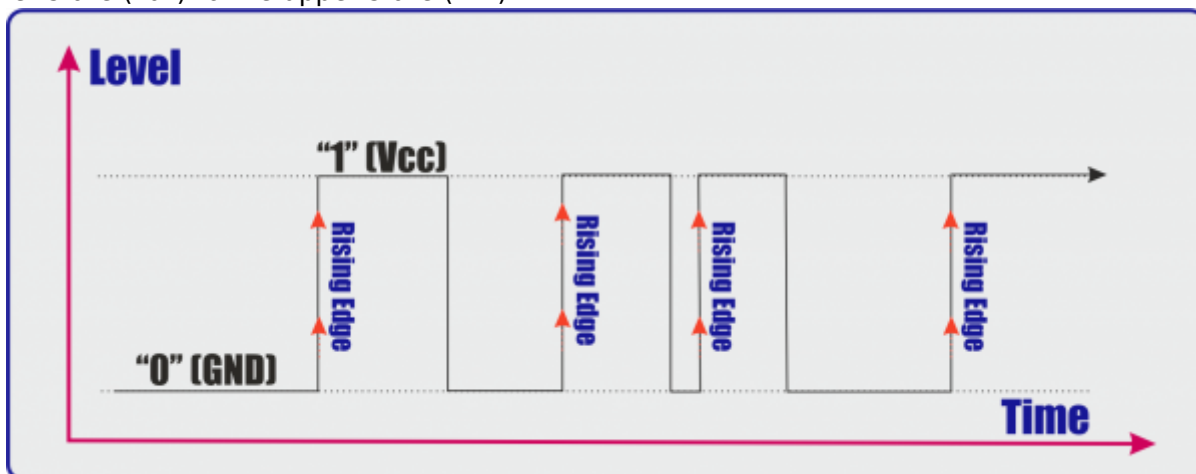

- After tripping, you can select the controller's output

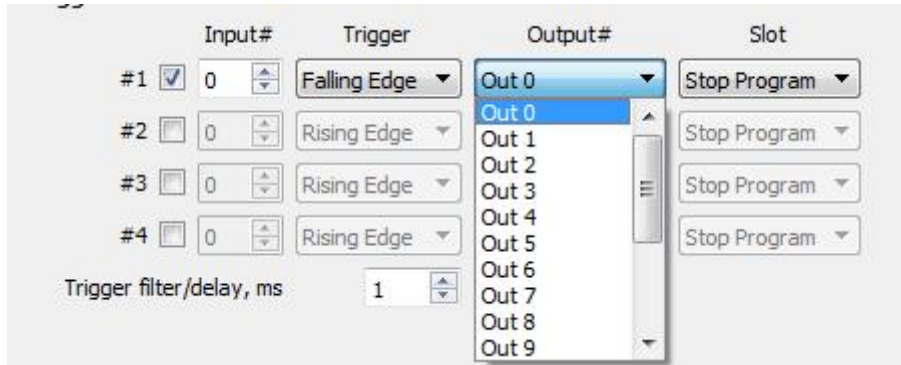

- You can also choose to start the necessary procedure for triggering the trigger



## Timers

- To activate the timer , it is necessary to check the box next to number of timer:




- After activating the timer, it is necessary to select the operating output of the controller




- You must select the duration of the output pulse and the length of the pause. Values are set in ms:

### Timer 0 schedule

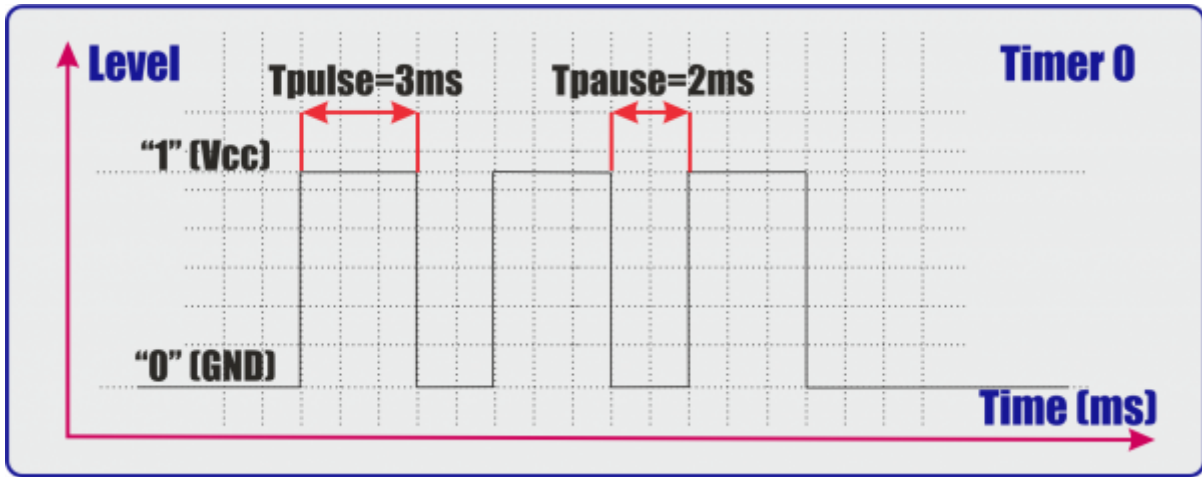

Timer 1 schedule

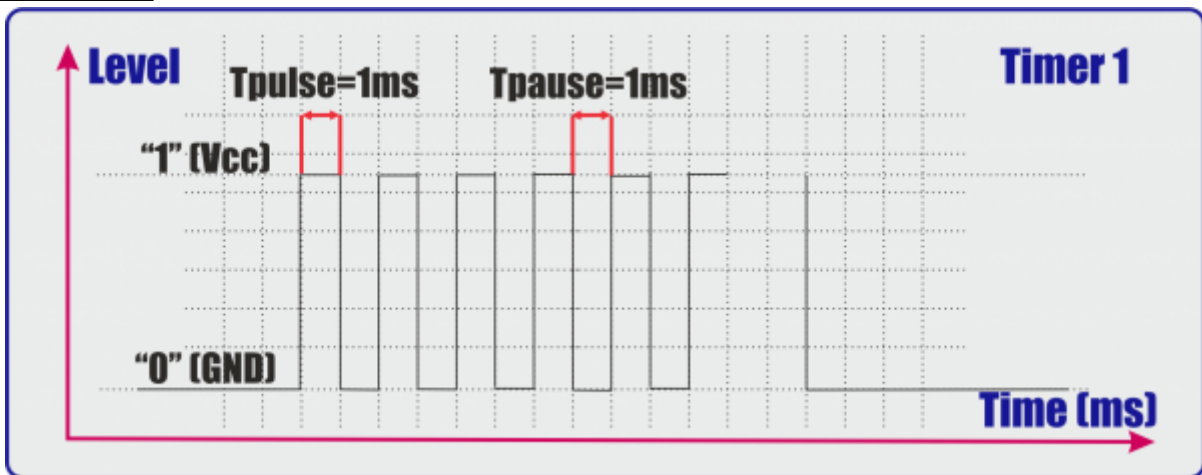

From: <http://www.cnc42.com/> - myCNC Online Documentation

Permanent link: [http://www.cnc42.com/mycnc/triggers\\_and\\_timers](http://www.cnc42.com/mycnc/triggers_and_timers)

Last update: 2018/08/17 09:58

