

# Console commands


The following console commands can be used for programming, reflashing of configuring the myCNC controller. The controller should be connected to PC through a USB-slave connector.

Serial connection is used with parameters 115200 8N1.

Command format	Command description	Examples
#SLE {A}	Possible value for {A} is 0,1 [S]et [L]AN [E]nable - turn on/off LAN/Ethernet interface. Automatically save settings in flash memory. Change will take effect after restart the driver. {A} - "1" LAN enable {A} - "0" LAN disable	#SLE 0 turns LAN interface off #SLE 1 turns LAN interface on
#SLA {A} {B} {C} {D}	Possible value for {ABCD} are 0...255 [S]et [L]AN [A]ddress - set LAN/Ethernet address of the board as given values ABCD:IP Addr = {A}.{B}.{C}.{D} Automatically save settings in flash memory. Change will take effect after restart the driver	#SLA 192 168 4 78 sets IP address to 192.168.4.78
#SL1 {A} {B} {C} {D} {E} {F}	Set the MAC address, ABCDEF values are in range of 0...255	#SL1 01 02 03 04 05 06 sets the MAC address to 01:02:03:04:05:06

## Examples

### SL1

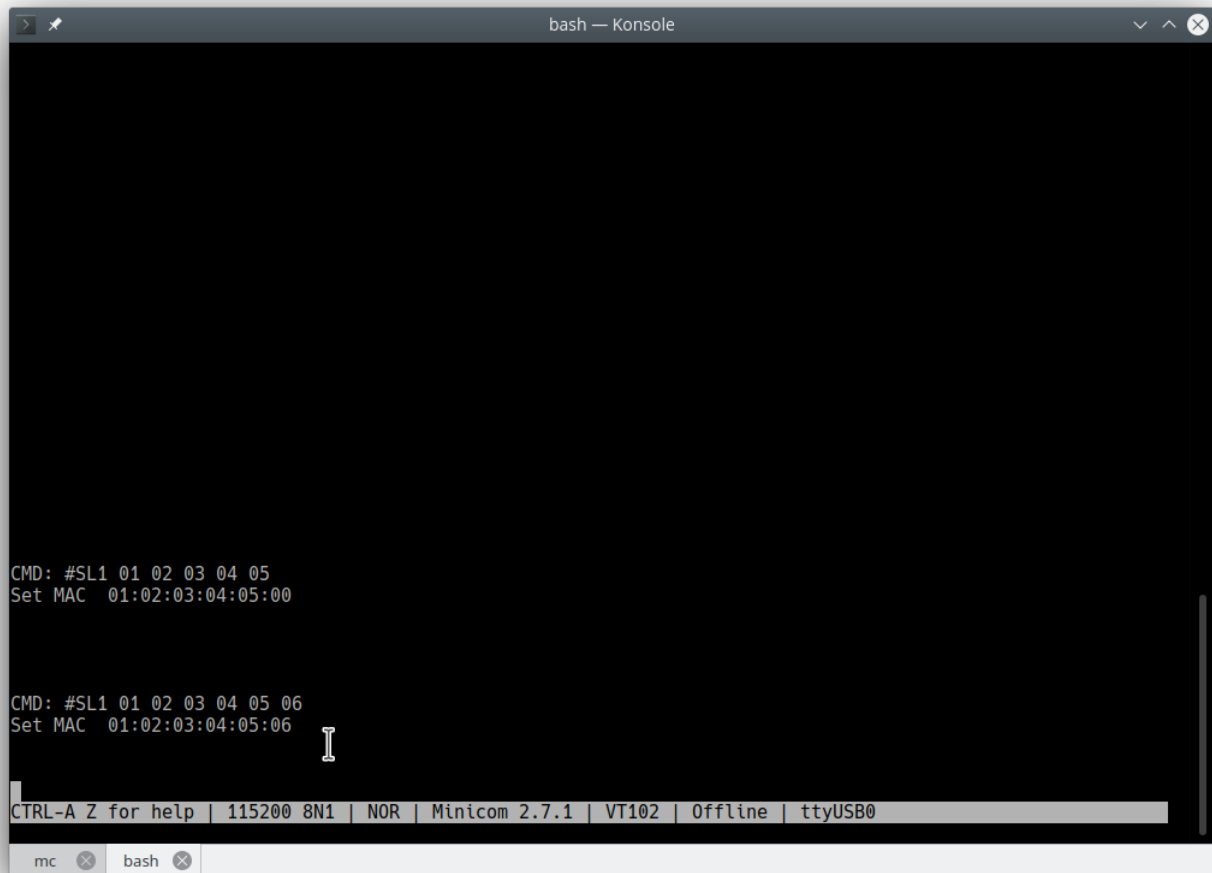

```
bash — Konsole

CMD: #SL1 01 02 03 04 05
Set MAC 01:02:03:04:05:00

CMD: #SL1 01 02 03 04 05 06
Set MAC 01:02:03:04:05:06

CTRL-A Z for help | 115200 8N1 | NOR | Minicom 2.7.1 | VT102 | Offline | ttyUSB0
```

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

[http://docs.pv-automation.com/other/console\\_commands](http://docs.pv-automation.com/other/console_commands)

Last update: **2021/04/13 11:09**

